
## Relays

- 1. Low Beam Relay
- 2. High Beam Relay
- 3. Fan Relay 3rd Speed Heating, Ventilation, A/C
- 4. Fan Relay 4th Speed Heating, Ventilation, A/C
- 5. Interior Lamp Delay Unit
- 6. Cool Fan Relay
- 7. Fan Fail Nodule/Fused Wire Jumper
- 8. A/C Panel Illumination Resistor
- 9. Starter Relay
- 10. A/C Panel Illumination Relay
- 11. Lambda Relay
- 12. Rear Defog Timer
- 13. Door Lock Module

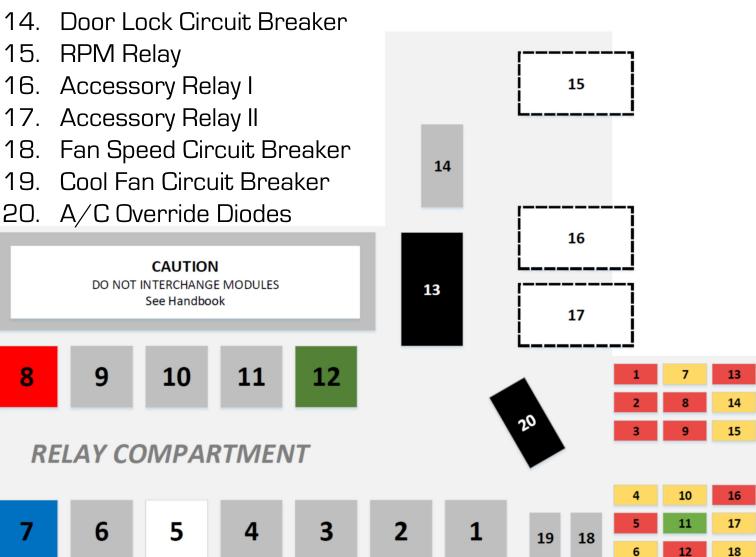

## **Fuses**

- 1. 10a RPM Relay, Distributor, Vacuum Solenoid, Ignition ECU & Idle Speed ECU
- 2. 10a LH Tail Lamp, Side Lamps, Front Parking Lamp & License Plate Lamp
- 3. 10a Windshield Wiper & Washer Motors
- 4. 20a Directional Indicator Switch & Stop Light Switch
- 5. 10a All Dash Instruments & Indicators, Service Interval Counter
- 6. 20a Hazard Warning Switch, Horns & Buzzers, Logic Box
- 7. 20a Lambda Relay, Lambda Ecu, Frequency Valve, Fuel Pump, and Control Pressure Regulator (CPR)
- 8. 10a RH Tail Lamp, Side Lamps, Front Parking Lamp,
  License Plate Lamp, Cigar Lighter Lamp,
  Instrument Panel Illumination Lamps,
  Main Light Switch Lamp & Digital Clock Lamp
- 9. 10a Heated Rear Window and Electrical Mirrors
- 10. 20a A/C Mode Switch & Door Lock Warning Lamp
- 11. 30a Radio Clock, Gear Selector Lamp, A/C Panel Lamps & Power Windows
- 12. 10a Diagnostic Plug, Engine Compartment Lamp, Luggage Compartment Lamp, Glove Box Lamp, Door Lamps, Interior Lamps & Interior Lamp Delay Unit
- 13. 10a Automatic Transmission
- 14. 20a Low Beam Headlamps
- 15. 20a High Beam Headlamps
- 16. 10a Reverse Lamps
- 17. 20a Cigar Lighter and Clocks
- 18. 20a Stop Lamps (Early Cars Have Inline Fuse at Brake Pedal)

